

PA53411 AOD SUPER SERVO

Step 1. Replace the entire servo assembly with the assembly supplied.

A. Piston Return Spring

B. Servo Piston

C. Piston Seal

D. Servo Cover Seals (2)

E. Servo Cover

Step 2. Insure to catch band when reinstalling piston assembly. Reuse stock snap ring.

